JOHANNUS WM-47 LDS

USER'S GUIDE

**This manual and additional videos available
for download at www.johannus-lds.com.**

INTRODUCTION

The Johannus WM-47 LDS organ is custom built for The Church of Jesus Christ of Latter-day Saints. It has been designed primarily as an instrument for accompanying congregational singing as well as to provide a variety of tonal color for prelude music.

Recordings of fine pipe organs from around the world are used to create the beautiful sound of this Johannus organ. When a player presses a key, we hear the actual recording of a pipe, not just an imitation of one.

We hope you enjoy using this instrument as much as we enjoy building it. Should you have any comments or questions, please contact your authorized Johannus dealer.

TABLE OF CONTENTS

SAFETY PRECAUTIONS

- ✓ Place the organ on a stable, horizontal surface.
- ✓ Connect the organ to an electrical outlet with a ground connection.
- ✓ Switch the organ off when it is not in use.
- ✓ Do not place the organ in a damp area.
- ✓ Do not expose the organ to liquids.
- ✓ Follow the instructions and precautionary measures in this user manual.
- ✓ Keep this user manual with the organ.
- ✓ The organ may only be opened by a technician authorized by Johannus Orgelbouw b.v. The organ contains static-sensitive components. The warranty becomes null and void if the organ is opened by a non-authorized person.

SYMBOLS IN THIS MANUAL

⚠ Warning or important information.

☞ Note.

MANUFACTURER

Johannus Orgelbouw b.v.
Keplerlaan 2
6716 BS EDE
The Netherlands

Telephone: +31 (0)318 63 74 03
Fax: +31 (0)318 62 22 38
E-mail: inform@johannus.com
Website: www.johannus.com

TECHNICAL ASSISTANCE AND SERVICE

Johannus-LDS Support
Telephone: 877-564-9644
E-mail: help@johannus-lds.com
Website: www.johannus-lds.com
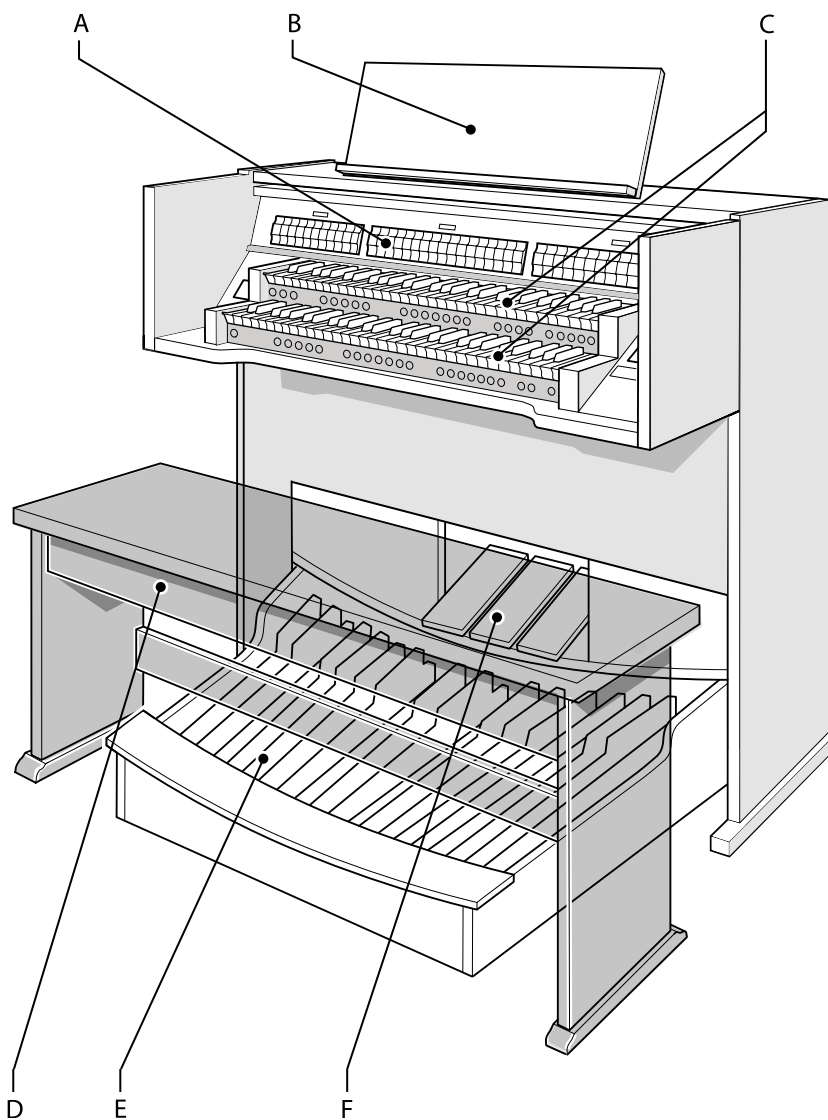
A   Stops
B   Music desk
C   Manuals
D   Bench
E   Pedalboard
F   Expression and Crescendo Shoes

OVERVIEW OF CONTROLS
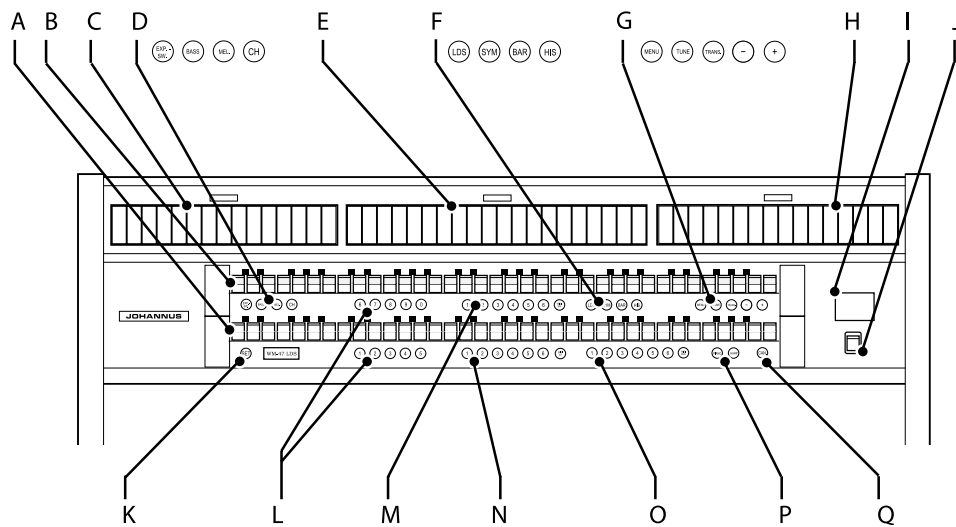
For a detailed description of functions see page number listed next to each feature.

A	Great Manual *7*	**H**	Great Stops *7*
B	Swell Manual *7*	**I**	Display
C	Pedal Stops *7*	**J**	Power Switch
D	EXP-SW *9*	**K**	SET *17*
	BASS *13*	**L**	General Pistons *11*
	MEL. *13*	**M**	Great Divisional Pistons *11*
	CH *19*	**N**	Swell Divisional Pistons *11*
E	Swell Stops *7*	**O**	Pedal Divisional Pistons *11*
F	Stoplist Pistons *20*	**P**	Piano, Harp *7, 20*
G	MENU *14, 22*	**Q**	General CANCEL *7*
	TUNE *19*		
	TRANS. *18*		
	- / + *12*		

OVERVIEW OF EXPRESSION SHOES
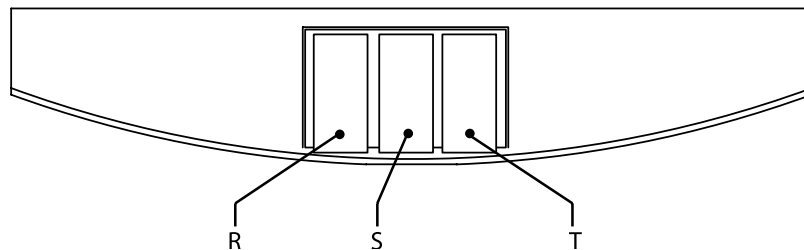
R Great/Pedal Expression *9*
S Swell Expression *9*
T General Crescendo *10*

ACTIVATING STOPS

Stops control the voices of the organ and have various names. When a stop is activated you will hear its voice when keys are played. For a more detailed description of each stop and how they can be used, see the section on stops and registration.

Either the top or the bottom of the stop tab may be pressed to turn a stop on or off. When the stop is activated the stop tab lights up.

The stops are grouped into *divisions* related to each of the keyboards and pedalboard. Stops from the Pedal division are heard on the pedalboard. Stops from the Swell division are heard on the Swell *manual* or keyboard. Stops from the Great division are heard on the Great manual.

Pedal Stops   Swell Stops   Great Stops

Swell Manual   Great Manual   Cancel Piston
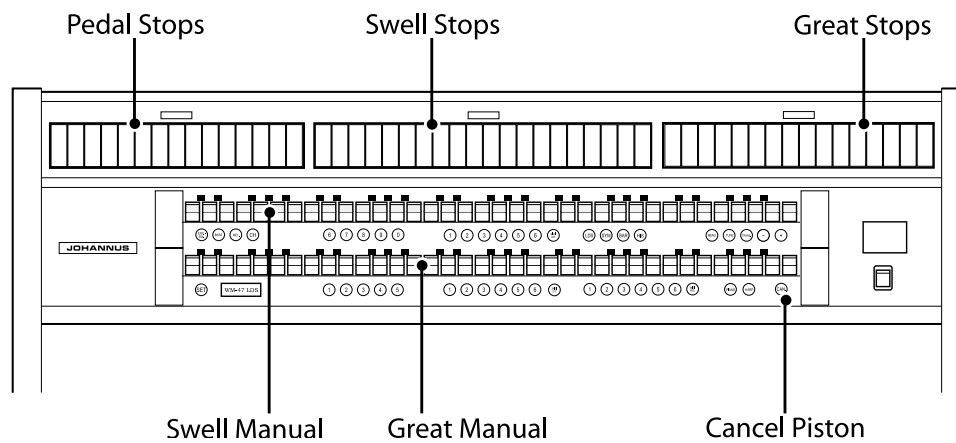
To turn off all stops at once, press the *general cancel piston*.

PIANO

The WM-47 LDS features a piano sample for use where a piano is not available. When the piano is activated all organ stops are deactivated. The piano is playable from the great manual. The middle f# on the pedalboard is functions as a sustain pedal.

Activate the piano by pressing the PIANO piston located below the keyboards on the right.

COUPLERS

Couplers link the stops of one division to another. For example, activate only the Swell Diapason 8'. You will now have sound on the Swell manual but no sound on the Great manual. Now, activate the Swell to Great coupler located to the far right of the Great stops. You will now be able to play the Swell Diapason 8' on the Great manual as well as the Swell.
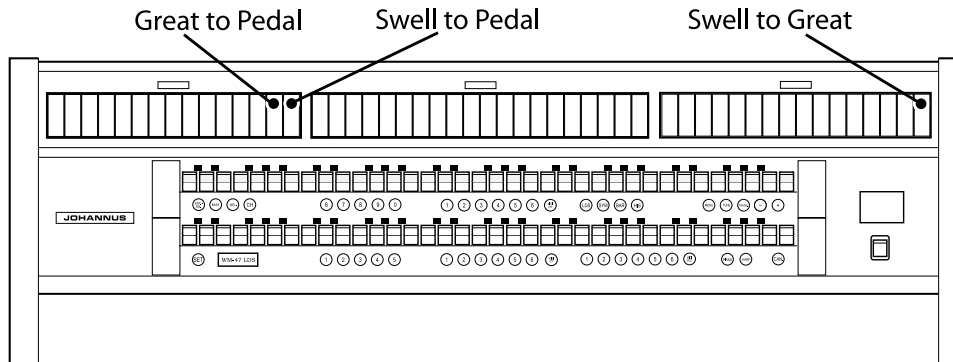
- Great to Pedal links the activated Great stops to the Pedal division.
- Swell to Pedal links the activated Swell stops to the Pedal division.
- Swell to Great links the activated Swell stops to the Great division.

The volume of the organ can be controlled by adding or removing stops as well as by using the *expression shoes.* Pressing the expression shoe forward (or opening the expression shoe) increases volume. To control the volume of stops on the Great manual and Pedal stops, use the Great/Pedal expression shoe. Volume of stops on the Swell manual are controlled by the Swell expression shoe.
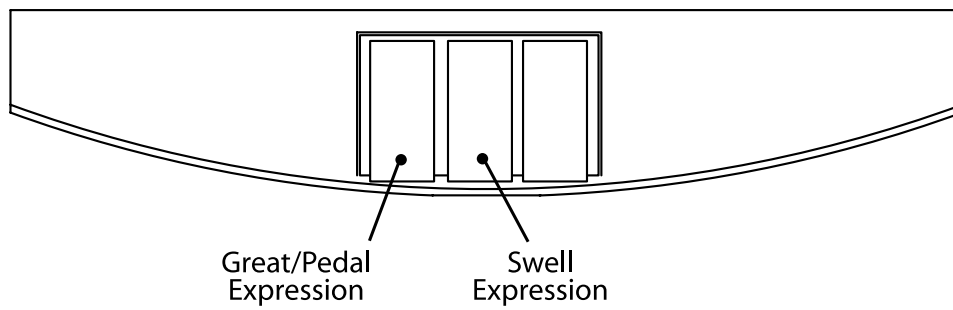
Great/Pedal
Expression

Swell
Expression

☞ The general volume of your Johannus WM-47 LDS has been set by the installer to successfully accompany congregational singing with the expression shoes fully open or pressed forward.

The positions of the expression shoes are indicated by the bars shown on the display.

WM-47 LDS

Memory: 1
Tune: 440 Hz
Trans: 0
Temp: Equal
Cresc: 0   Gt/Ped   Sw

Expression
Level
Indicators
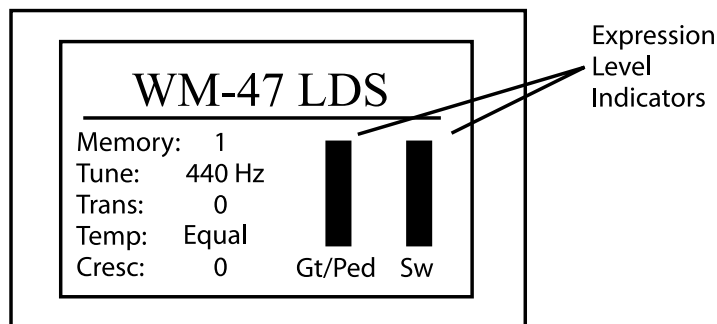
If you would like to control the volume of the entire organ with one expression shoe, use the EXP-SW piston. When the EXP-SW piston is activated, all expression is controlled by the Swell shoe.

Expression on Swell

JOHANNUS

WM-47 LDS
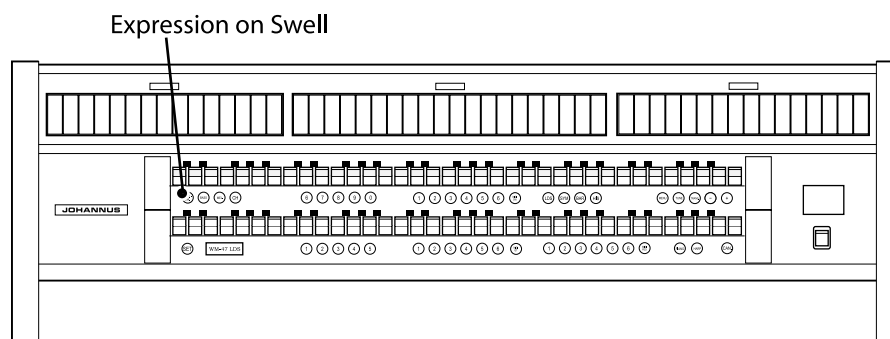
CRESCENDO PEDAL

The crescendo pedal or shoe increases volume of the organ by adding stops. The stops light up as the shoe is pressed forward. *The crescendo pedal is normally only used for classical organ literature and choral accompaniment.*
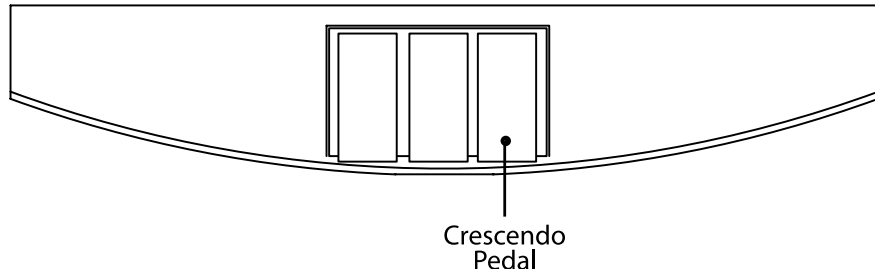
Crescendo
Pedal

☞   If you cannot get some stops to turn off, check to make sure that the crescendo shoe is not pressed forward.

GENERAL AND DIVISIONAL PISTONS

Pistons (or combination memory) are used to quickly recall stop settings. Pistons can be preset or programmed by the organist. The WM-47 LDS has several sets of pistons to assist you in playing the organ.

General Pistons control stops in all divisions (Swell, Great, and Pedal) of the organ.

Great Divisional Pistons only control stops in the Great division.

Swell Divisional Pistons only control stops in the Swell division.

Pedal Divisional Pistons only control stops in the Pedal division.
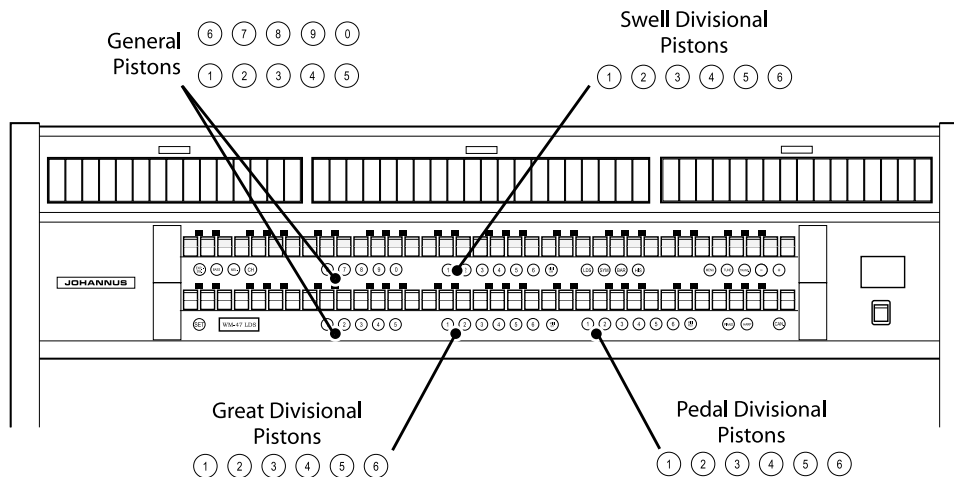
The pistons discussed in the previous section have been preset to help users select stops quickly.

Preset pistons for congregational singing:

The preset pistons for congregational singing are located on *memory level 1*. Current memory level is indicated in the display.

When the organ is turned on, memory level 1 is selected by default.

On memory level 1 the general pistons are ready for congregational singing. They are programmed from soft (1) to loud (0).

☞   The organ will return to these presets every time the organ is turned on. If someone has been using the organ before you, you may wish to turn the organ off, then on again.

Preset pistons for prelude:

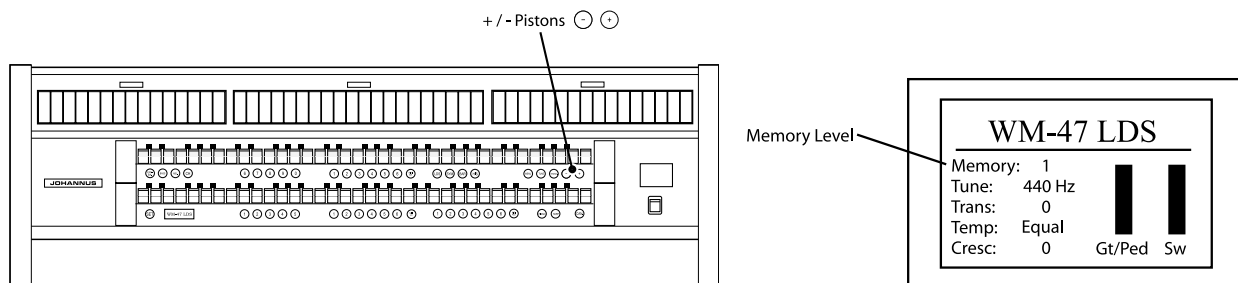The preset pistons for prelude are located on *memory level 2*. Current memory level is indicated in the display.   To advance to memory level 2, press the + piston. Pressing the + and – pistons change memory levels. Current memory level is shown in the display.

On memory level 2 the general pistons are programmed with combinations suitable for prelude playing.

☞   General pistons 1-5 are programmed to play the melody (one note at a time) on the Great manual with the accompaniment on the Swell manual. Alternatively, all parts may be played on the Swell manual only.

☞   General pistons 6-0 are programmed to play the melody (one note at a time) on the Swell manual with the accompaniment on the Great manual. Alternatively, all parts may be plated on the Great manual only.

The divisional pistons are programmed with additional solo combinations for playing the melody.

BASS & MELODY COUPLERS
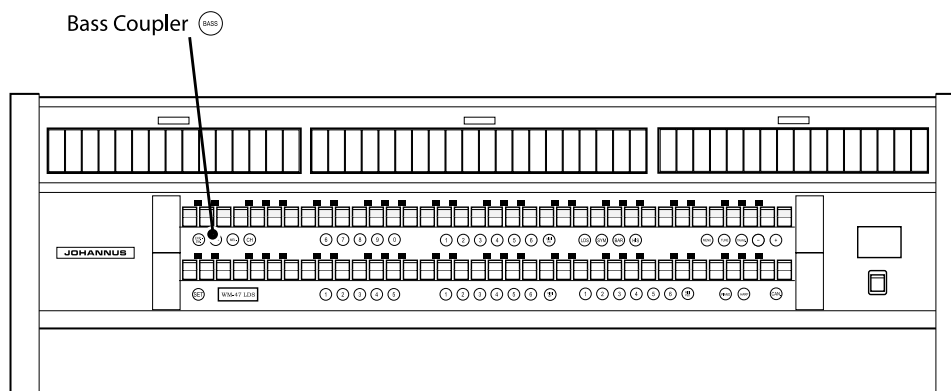
Bass Coupler (BASS)

The BASS piston activates the *bass coupler*. This is a valuable tool for organists who do not play the pedalboard. When activated, the lowest note played on the Great manual is automatically played on the Pedal stops as well. This imitates the effect of the pedals being played and adds foundation to the organ's sound.

☞   The bass coupler only works on the Great manual.

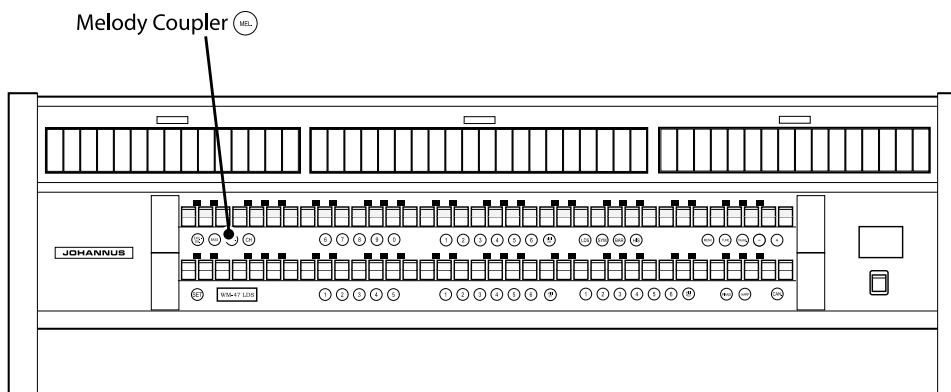☞   Some Pedal stops must be activated for the bass coupler to take effect.

☞   The bass coupler will remain active until the BASS piston is pressed again and the light turns off.

Melody Coupler (MEL)

The MEL. piston activates the *melody coupler*. When activated, the highest note played on the Great manual is automatically played on the Swell stops as well. This allows the melody to be heard more clearly. It is also useful for interesting prelude music.

☞   The melody coupler only works on the Great manual.

☞   At least one Swell stop must be activated for the melody coupler to take effect.

☞   The melody coupler will remain active until the MEL. piston is pressed again and the light turns off.

The Johannus WM-47 LDS organ has the ability to play 162 hymns.

To activate Hymn Player:

1. Press the MENU piston.

Menu Piston (MENU)
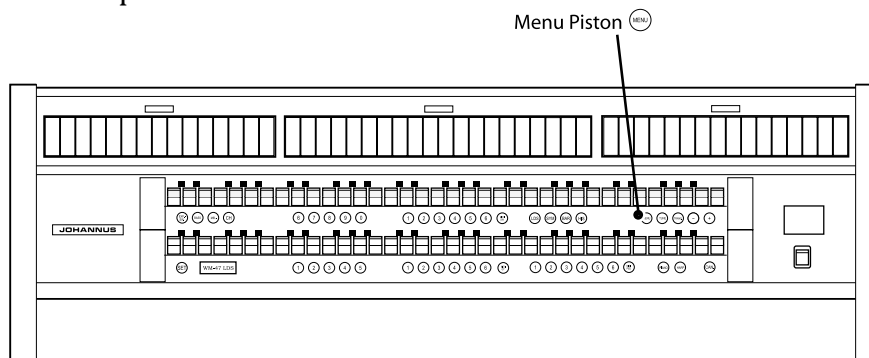
2. The display shows the selection of Hymn Player. If the display does not show Hymn Player as the selection, use the + or – pistons to navigate.
3. Press SET to enter Hymn Player.

Set Piston (SET)
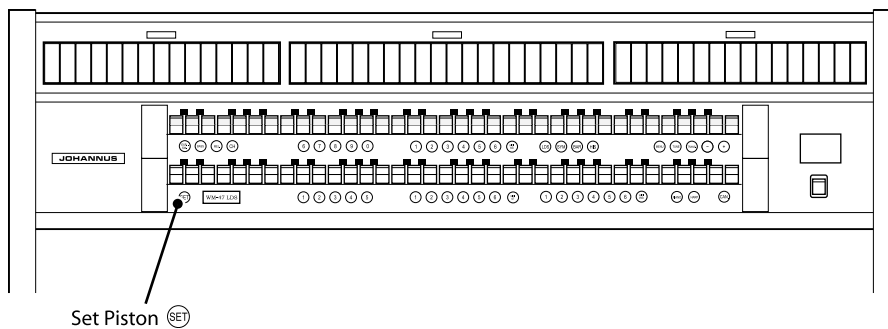
4. Use the + or – pistons to select Hymns, Preludes, or Language Selection as indicated by the arrow on the display.

+ / – Pistons (–) (+)

5. Follow instructions for playing hymns or preludes below.

To play a hymn:

1. Activate the Hymn Player as described above and select Hymns in step four.

```
Hymn Player:
>Hymns
  Preludes
  Language



      Press -/+ to browse
```
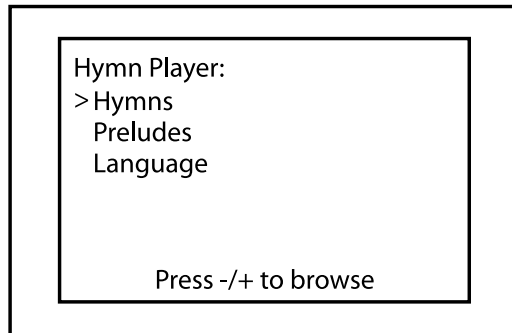
2. Press SET to enter Hymns mode.
3. Enter the hymn number from the English edition of *Hymns* using the general pistons. (If have selected another language from the menu such as Spanish, enter the hymn number from the Spanish hymnal). Three digits must be entered; i.e. to play hymn number 62 you must press general pistons 0, 6, 2.

```
Hymns:

    Enter Hymn Number using
         Generals 1 - 0:


            _ _ _

CAN=Return          MENU=Quit
```
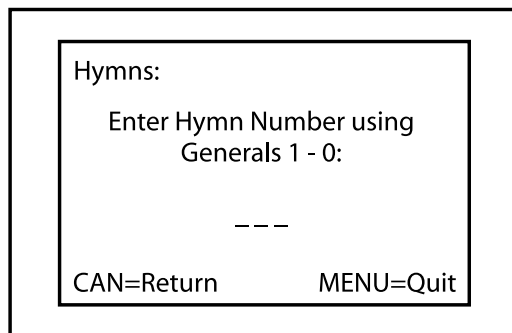
4. Your hymn selection is shown on the display.

```
Hymns:

    62.  All Creatures of Our
         God and King


       Press -/+ to browse
  SET=Enter      CAN=Re-Enter
```
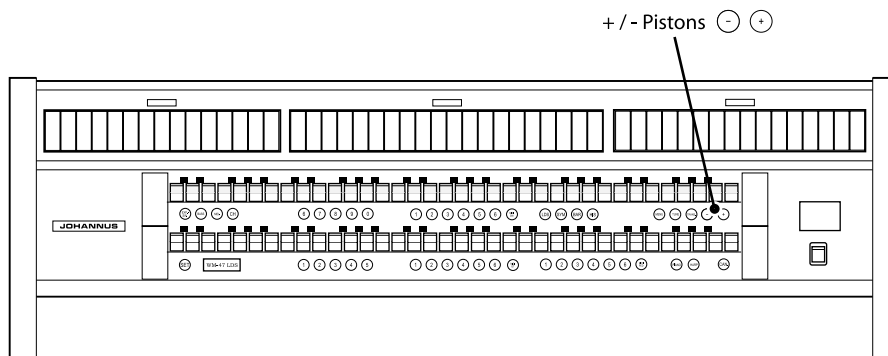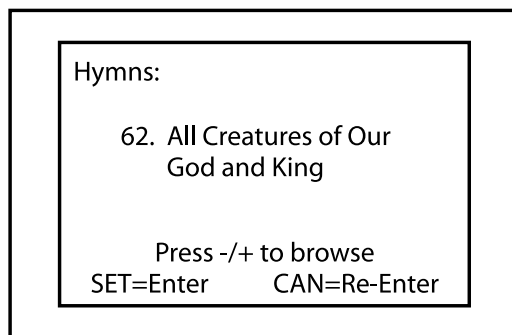
5. Press SET to confirm your selection or press + or – to browse.
6. Select whether to start with an introduction or full verse using the + or – pistons. This is indicated by the arrow on the display pointing to "Play Intro" or "Play Verse".

```
Hymns:
      62.  All Creatures of Our
           God and King

   > Play Intro
      Play Verse

 -/+=Browse          CAN=Return
 SET=Enter           MENU=Quit
```
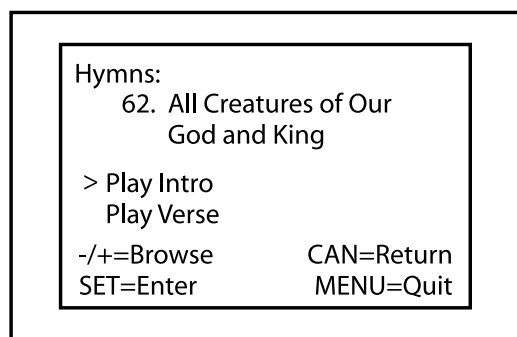
7. Press SET to begin playing the introduction or verse.
8. Adjust the volume using the Swell expression shoe.

Great/Pedal   Swell
Expression   Expression
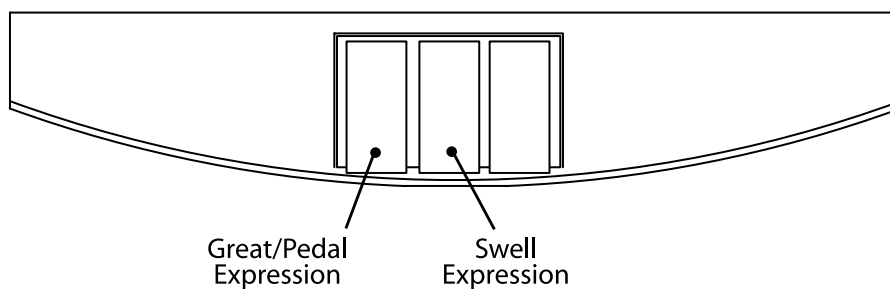
9. Press SET at the end of the introduction or verse to play another verse of the same hymn.
10. Press MENU to return to the main screen.

To play prelude music:

1. Activate the Hymn Player as described above and select Preludes in step four.
2. Press SET to enter Preludes mode.

```
Preludes:
  > Preludes
     Christmas Preludes



 -/+=Browse          CAN=Return
 SET=Play            MENU=Quit
```
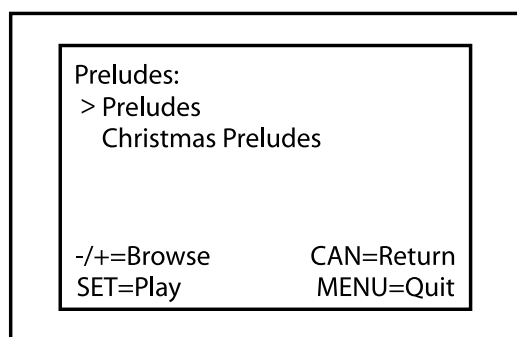
3. Select Preludes or Christmas Preludes using + and – pistons.
4. Press SET to begin prelude playback.

```
Preludes:
 196.  Jesus, Once of Humble
        Birth

        Playing Preludes


-/+=Tempo  76        CAN=Stop
```
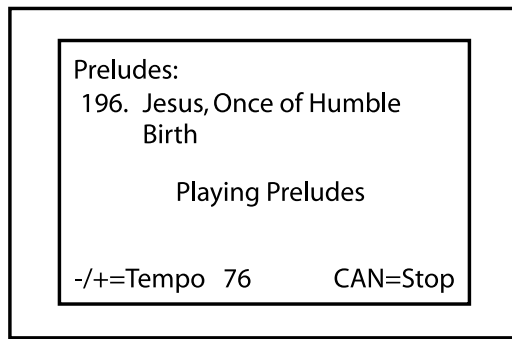
5. Adjust the volume using the Swell expression shoe.
6. Press CAN. to stop Preludes.
7. Press MENU several times to return to the main screen.

☞ The Prelude Player always plays the preludes in the same order for smooth transitions from song to song. However, it always begins with a different hymn to increase variety. The prelude player contains 50 hymns played twice each.

ADVANCED FUNCTIONS
PROGRAMMING PISTONS

The Johannus WM-47 LDS features 100 memory levels. Memory levels 1 and 2 are preset and cannot be changed. However, memory levels 3-100 are available to program as needed.

Program pistons as follows:

1. Select a memory level (3-100) by using the + and – pistons.

2. Set the desired stops by hand.
3. Press and hold SET.

Set Piston ⓈⒺⓉ

4. Press and release the piston you wish to program.
5. Release SET.

☞   Remember that memory levels 1 and 2 are locked. If you try to program a piston on memory level 1 or 2 it will not work.

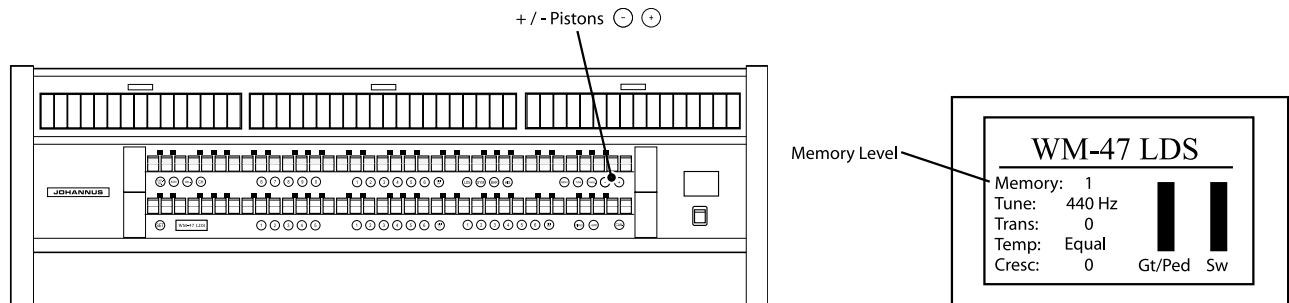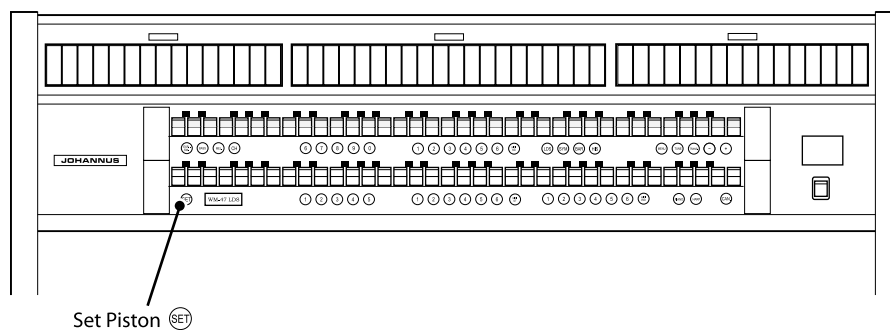☞   If you wish to program stops on all divisions at once, make sure you use a general piston. Divisional pistons will only recall stops in their respective divisions.

☞   You may wish to coordinate assignment of memory levels with other organists in your building in order to avoid confusion.

ADVANCED FUNCTIONS
TRANSPOSER

It is possible to automatically transpose your playing up or down in half-step increments.

1. Press the TRANS. piston.
2. Press + or – to transpose the playing up or down in half-step increments.
3. The position of the transposer is indicated in the display.

Transpose Piston ⓉⓇⒶⓃⓈ

Transposer Position

WM-47 LDS

Memory: 1
Tune: 440 Hz
Trans: 0
Temp: Equal
Cresc: 0   Gt/Ped   Sw
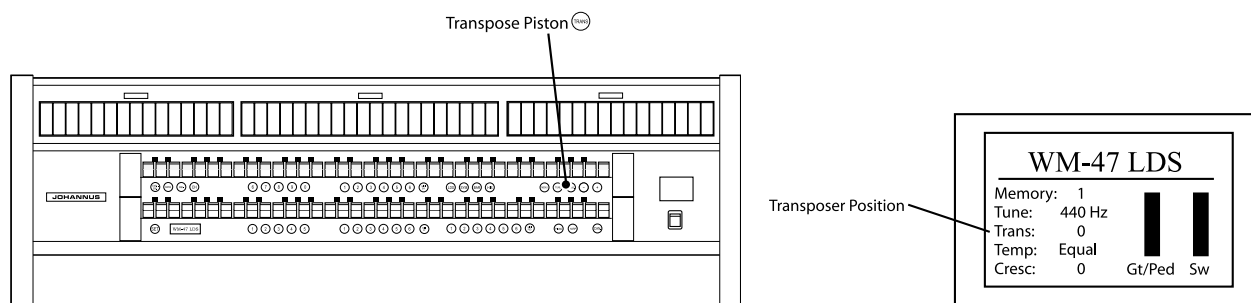
☞   You must press + or – before the TRANS. piston light goes out (about 5 seconds). When TRANS. is not lit, + and – change memory levels.

☞   When the organ is turned off, the transposer will automatically reset to the 0 position.

TUNING

It is possible to tune the organ for playing with other instruments (e.g., a piano that is a bit flat).

1. Press the TUNE piston.
2. Press + or – to tune the organ up or down incrementally
3. The position of the tuner is indicated in the display.
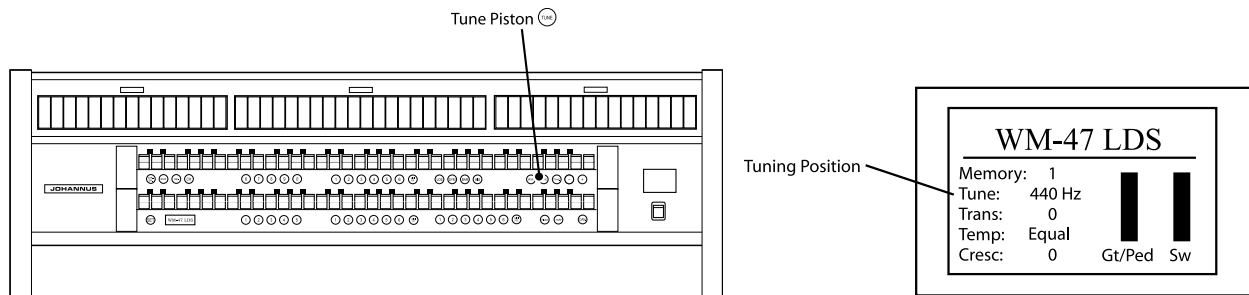
☞ You must press + or – before the TUNE piston light goes out (about 5 seconds). When TUNE is not lit, + and – change memory levels.

☞ When the organ is turned off, the tuning will automatically return to the standard A440.

CHORUS TUNING

A pipe organ is never perfectly in tune. That is part of what gives a pipe organ its character. By activating the CHORUS piston, the tuning between different stops on the organ becomes more varied to imitate this characteristic of a pipe organ.
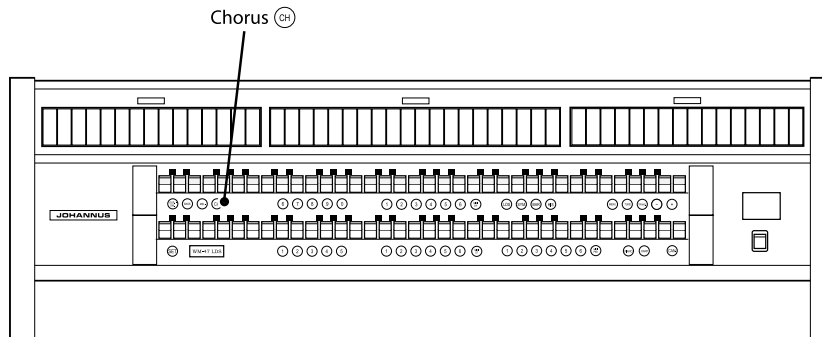
STOPLISTS

Pipe organs are built in many styles. The primary style of the Johannus WM-47 LDS is American Classic. It is possible to change the style of the organ to French Symphonic, Baroque, or Historic by pressing one of the stoplist pistons.
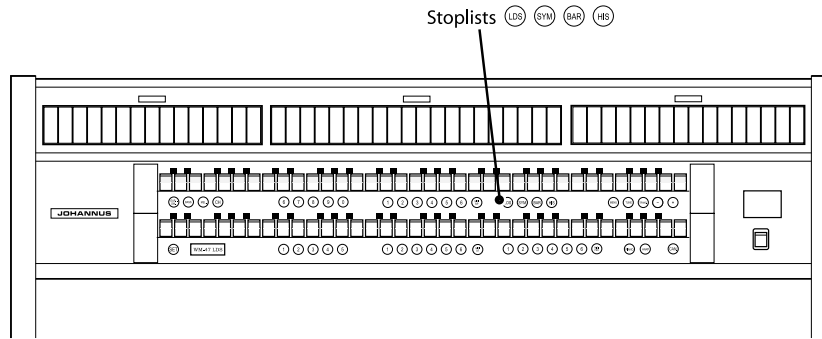
SELECTING HARP STYLE

The organ features three different harp samples. The default sample is the orchestral harp. To change to another harp sample:

1. Press the MENU piston.
2. Use the + / - pistons to select Orchestrals from the menu.
3. Press SET.
4. Use the + / - pistons to select harp.
5. Press SET.
6. Use the + / - pistons to select the harp style.
7. Press SET.

```
Harp:
 > Harp (default)
    Glassharp
    Woodharp
 Assigned to:     Great

      Select keyboard or
     Use -/+, SET or MENU
```
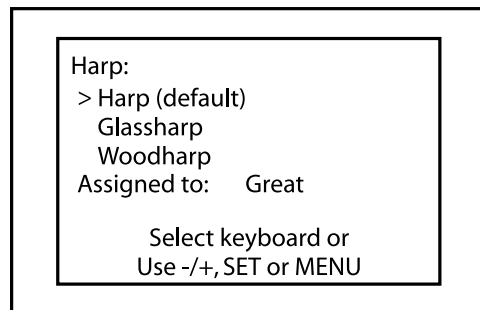
TUTTI

Tutti is used to quickly engage full organ. Press the Tutti thumb piston to engage and disengage Tutti.

PROGRAMMABLE MIDI

The organ features MIDI couplers for controlling external MIDI devices.
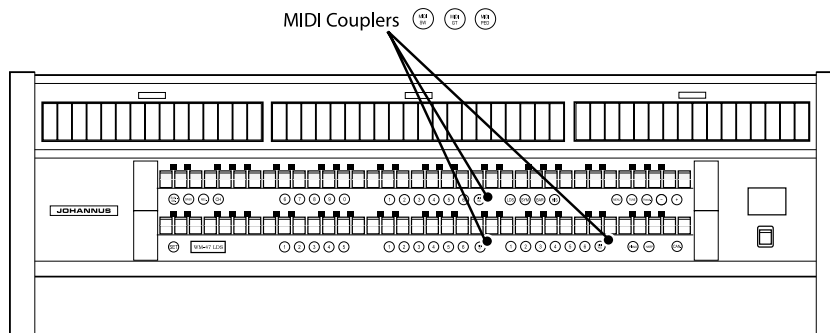
With the programmable MIDI stops, you can control any module voice (1-128) through any MIDI channel (1-16).

1. Press the MENU piston.
2. Select "Programmable MIDI" from the menu.
3. Press SET. "MIDI:" appears on the display.
4. Select the MIDI stop to be programmed (for example, MIDI Swell). On the display, "MIDI: Swell" now appears.
5. Use the + and – pistons to select the desired channel.
6. Press SET.
7. Use the + and – pistons to select the desired MIDI voice number.
8. Press SET. The selected adjustments are now stored in memory.
9. Select another MIDI stop to be programmed if desired.
10. Press MENU to return to the main menu.
11. Press MENU again to exit the Easy Menu.

Reset Procedures

The Reset Procedures function is used to delete the capture memory, or to reset a number of settings to the factory settings.

1. Push the MENU piston.
2. Use the - and + pistons to select the Reset Procedures function on the display.
3. Push the SET piston. The display shows the menu for the Reset Procedures.
4. Use the - and + pistons to select the desired procedure.
5. Push the SET piston. The display requests confirmation.
6. Use the - and + pistons for No or Yes.
7. Push the SET piston for confirmation.
8. Press the MENU piston to return to the main menu.
9. Press the MENU piston again to exit the Easy Menu.

Data Dump Mode

The Data Dump Mode function sends settings from the organ to a storage medium (for example a sequencer) through the MIDI SEQ. output.

1. Push the MENU piston.
2. Use the - and + pistons to select the Data Dump Mode function on the display.
3. Push the SET piston. The Press Set piston text appears on the display.
4. Make sure the desired storage medium is properly connected.
5. Push the SET piston again. When data is being sent, Sending data appears on the display.
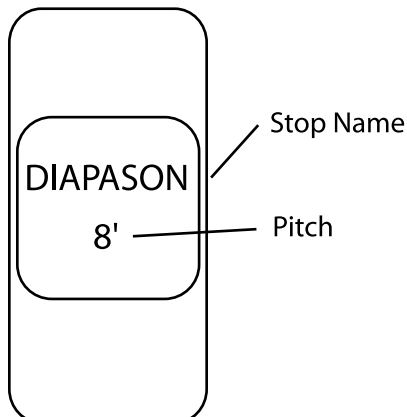
⚠ Do not use the organ when the text "Sending Data" is on the display.

6. Press the MENU piston in to return to the main menu.
7. Press the MENU piston in again to exit the Easy Menu.

Stop Name

DIAPASON
8'

Pitch

Stops control the voices of the organ and have various names. When a stop is activated you will hear its voice when keys are played.

Each stop is labeled to identify its voice. The words on the stop tab show the name of the stop. The stop name gives you an idea of what sound you will hear from the stop. The number identifies the pitch of the voice.

FAMILIES OF ORGAN STOPS

Organ stops are divided into four basic families: diapasons/principals, flutes, strings and reeds. We will detail all of the stops on the Johannus WM-47 LDS and place them in their respective families.

Diapasons (Principals)
The diapason or principal is the basic foundation voice and is unique to the organ. This is the predominate sound in a good full organ ensemble and is essential in accompanying hymn singing. The following diapason names are used on the Johannus LDS organ: diapason, principal, octave, and choral bass.

Flutes
Flute stops on the organ are imitative of the sound of an orchestral flute. These stops are gentle and sweet in nature, but may vary considerably depending upon the construction of the pipe. The following flute names are used on the Johannus LDS organ: flute, bourdon, and gedeckt.

Strings
String stops possess more harmonic development than the basic flute stops and are imitative of stringed instruments. Stops in this family are used as warm and ethereal accompaniment stops, mix well with other stops, and are generally the softer stops on the organ. The following string names are used on the Johannus LDS organ: viola di gamba, voix celeste, aeoline celeste, contra violone, and gemshorn (a hybrid stop with flute and string characteristics).

Reeds
The sound from reed pipes is produced by using a brass reed and resonator and imitate many brass and woodwind instruments. These can be either solo reeds or chorus reeds. Solo reeds are somewhat imitative of orchestral reed instruments and are used almost exclusively for solo passages; chorus reeds are used in combination with other reeds or to add "fire" to the Principal/Diapason chorus. The reeds on the Johannus LDS organ are printed in red ink.

Harmonic Corroborating Stops

MIXTURES - Mixtures contain multiple pipes sounding simultaneously and are indicated by a roman numeral after the name. These stops add brightness and clarity to the choruses of the organ. For example, adding the Full Mixture IV to the Open Diapason 8', Octave 4' and Super Octave 2' on the Great adds clarity and sparkle needed for large congregations or rousing hymns.

MUTATIONS - Mutations is usually a stop of flute or principal tone which speaks at a pitch not related to the fundamental by an octave and are indicated by fractional numbers after the name. A 2 2/3' pipe sounds an octave and a fifth above the note you play; 1 3/5' two octaves and a third. These add interesting color when used with the fundamental pitches (8' flute, etc.) of the organ.

HYBRIDS - These are stops that could fall into more that one of the families of stops. The Johannus LDS organ has some gemshorn stops that are hybrid between flute and string, but lean more toward the string sound.

Percussion Voices
The Johannus LDS organ has a percussive solo stop called chimes. They are played from the Great keyboard. If the key is struck and released quickly, the chime will decay quickly. To make the chime ring longer, simply hold the key down longer.

PITCHES OF ORGAN STOPS

The numbers associated with the names of the stops indicate the pitch at which the stop will sound. 8' (eight foot) is the basic pitch on the manuals (keyboards) and is the pitch at which a piano sounds. Dividing or multiplying the 8' pitch results in higher or lower pitches. For example, if you play middle C on a 4' stop it will sound one octave higher than middle C; 2' would be two octaves higher. 16' stops are an octave lower than 8' stops; 32' stops are two octaves lower. See Mutations under Families of Organ Stops for explanations of fractional pitches.

BASIC REGISTRATION CONCEPTS

In LDS church services, the primary use of the organ is accompaniment of congregational singing. Proper registration will help encourage the congregation to sing. Consider the following items when choosing stops for a hymn:

- Will the registration adequately support the congregation?
- Using stops from the diapason/principal chorus especially at the 8' level is the beginning of a good foundation.
- For singers in a congregation to still be able to hear the organ and be encouraged to sing, stops above the 8' level (i.e. 4' and higher for brighter hymns) in the hands are necessary, except for the softest of hymns, such as some verses of sacrament hymns.
- Using Pedal stops will add necessary support to the hymn. Use at least 16' and 8' Pedal stops.
- Read the text of the hymn.
- Use registrations that reflect the message of the hymn.
- Diapasons/principals at 8', 4', 2' and a Mixture in the hands would be appropriate for a hymn such as "The Spirit of God," but would not be suitable for a sacramental hymn.
- The organ must provide a solid pitch for the singers.
- DO NOT use tremulant for congregational singing. It makes it too difficult for the singers to find their pitches.
- Celestes may also make it difficult for singers to find their proper pitches.
- Inspire the congregation to sing.
- Change registration between verses when appropriate.
- Don't be timid. Play loud enough that the congregation doesn't feel "alone," however, do not overpower the congregation. Remember that you are closer to the source of organ sound than the singers are and the organ may sound too loud to you but may not be supporting the congregation adequately.

SUGGESTED HYMN REGISTRATIONS

Quiet Hymn

Great		Swell		Pedal	
Open Diapason	8'	Gedeckt	8'	Bourdon	16'
Harmonic Flute	4'	Chimney Flute	4'	Bass Flute	8'
Swell to Great					

Moderately Quiet Hymn

Great		Swell		Pedal	
Open Diapason	8'	Diapason	8'	Open Diapason	16'
Octave	4'	Gedeckt	8'	Octave	8'
Swell to Great		Principal	4'		
		Chimney Flute	4'		

Medium Hymn

Great		Swell		Pedal	
Open Diapason	8'	Diapason	8'	Open Diapason	16'
Stopped Flute	8'	Gedeckt	8'	Octave	8'
Octave	4'	Principal	4'	Choral Bass	4'
Harmonic Flute	4'	Chimney Flute	4'		
Swell to Great		Piccolo	2'		

Moderately Strong Hymn

Great		Swell		Pedal	
Open Diapason	8'	Diapason	8'	Open Diapason	16'
Stopped Flute	8'	Gedeckt	8'	Octave	8'
Octave	4'	Principal	4'	Choral Bass	4'
Harmonic Flute	4'	Chimney Flute	4'		
Super Octave	2'	Piccolo	2'		
Swell to Great					

Moderately Strong Hymn

Great		Swell		Pedal	
Open Diapason	8'	Diapason	8'	Open Diapason	16'
Stopped Flute	8'	Gedeckt	8'	Octave	8'
Octave	4'	Principal	4'	Choral Bass	4'
Harmonic Flute	4'	Chimney Flute	4'	Swell to Pedal	
Super Octave	2'	Piccolo	2'		
Swell to Great		Oboe	8'		

Strong Hymn

Great		Swell		Pedal	
Open Diapason	8'	Diapason	8'	Open Diapason	16'
Stopped Flute	8'	Gedeckt	8'	Bourdon	16'
Claribel Flute	8'	Principal	4'	Octave	8'
Octave	4'	Chimney Flute	4'	Bass Flute	8'
Harmonic Flute	4'	Piccolo	2'	Choral Bass	4'
Octave Quint	2 2/3'	Mixture	IV	Mixture	III
Super Octave	2'			Great to Pedal	
Full Mixture	IV			Swell to Pedal	
Swell to Great					

Strong Hymn

Great		Swell		Pedal	
Open Diapason	8'	Diapason	8'	Open Diapason	16'
Stopped Flute	8'	Gedeckt	8'	Bourdon	16'
Octave	4'	Principal	4'	Octave	8'
Harmonic Flute	4'	Chimney Flute	4'	Bass Flute	8'
Octave Quint	2 2/3'	Piccolo	2'	Choral Bass	4'
Super Octave	2'	Mixture	IV	Mixture	III
Full Mixture	IV	Trumpet	8'	Fagotto	16'
Swell to Great				Great to Pedal	
				Swell to Pedal	

Strong Hymn (Perhaps Final Verse)

Great		Swell		Pedal	
Bourdon	16'	Diapason	8'	Contra Violone	32'
Open Diapason	8'	Gedeckt	8'	Open Diapason	16'
Stopped Flute	8'	Principal	4'	Bourdon	16'
Octave	4'	Chimney Flute	4'	Octave	8'
Harmonic Flute	4'	Piccolo	2'	Bass Flute	8'
Octave Quint	2 2/3'	Mixture	IV	Choral Bass	4'
Super Octave	2'	Trumpet	8'	Mixture	III
Full Mixture	IV	Clarion	4'	Fagotto	16'
Posaune	8'			Trumpet	8'
Swell to Great				Clarion	4'
				Great to Pedal	
				Swell to Pedal	

SUGGESTED PRELUDE REGISTRATIONS

Both Hands on One Manual

Great		Swell		Pedal	
Gemshorn	8'	Gedeckt	8'	Echo Bourdon	16'
Gemshorn Celeste	8'	Flute Celeste	8'	Swell to Pedal	
Swell to Great		Viola di Gamba	8'		
		Voix Celeste	8'		

Great		Swell		Pedal	
Stopped Flute	8'	Viola di Gamba	8'	Echo Bourdon	16'
		Voix Celeste	8'		

Great		Swell		Pedal	
Stopped Flute	8'	Gedeckt	8'	Echo Bourdon	16'
Harmonic Flute	4'	Flute Celeste	8'	Great to Pedal	
Swell to Great					

Melody on Great, Accompaniment on Swell

Great		Swell		Pedal	
Cromorne	8'	Viola di Gamba	8'	Echo Bourdon	16'
		Voix Celeste	8'	Swell to Pedal	

Great		Swell		Pedal	
Bourdon	16'	Gedeckt	8'	Echo Bourdon	16'
Harmonic Flute	4'				
Tremulant					

Great		Swell		Pedal	
Chimes		Viola di Gamba	8'	Echo Bourdon	16'
		Voix Celeste	8'	Swell to Pedal	
		Aeoline Celeste II	8'		

Great		Swell		Pedal	
Posaune	8'	Gedeckt	8'	Echo Bourdon	16'
		Chimney Flute	4'	Bass Flute	8'

Melody on Swell, Accompaniment on Great

Great		**Swell**		**Pedal**	
Gemshorn	8'	English Horn	8'	Echo Bourdon	16'
Gemshorn Celeste	8'			Great to Pedal	

Great		**Swell**		**Pedal**	
Stopped Flute	8'	Gedeckt	8'	Echo Bourdon	16'
		Nasard	2 2/3'	Great to Pedal	
		Tremulant			

Great		**Swell**		**Pedal**	
Stopped Flute	8'	Gedeckt	8'	Echo Bourdon	16'
Gemshorn	8'	Chimney Flute	4'	Great to Pedal	
Gemshorn Celeste	8'	Nasard	2 2/3'		
		Piccolo	2'		
		Tierce	1 3/5'		

Great		**Swell**		**Pedal**	
Gemshorn	8'	Gemshorn	16'	Echo Bourdon	16'
Gemshorn Celeste	8'	Gedeckt	8'	Bass Flute	8'
		Chimney Flute	4'		
		Piccolo	2'		
		Tremulant			

Great		**Swell**		**Pedal**	
Stopped Flute	8'	Oboe	8'	Echo Bourdon	16'
Harmonic Flute	4'			Great to Pedal	

HYMN PLAYER CONTENTS

MAINTENANCE

Cabinet Maintenance

The cabinet is made of solid wood and wood veneer.

⚠ Do not use furniture polish or teak oil to clean the organ cabinet.
Direct sunlight may discolor the organ cabinet.

1. Clean the organ with a damp cloth.
2. Rub the cabinet dry with a lint-free cloth.

Keyboard Maintenance

The keyboards are made of man-made synthetic.

⚠ Do not use aggressive cleaning agents such as paint thinner or acetone to remove dirt.

1. Clean the keyboards with a damp cloth.
2. Rub the manuals dry with a lint-free cloth.
3. Remove any scratches with car polish.

WARRANTY

The conditions are specified in the warranty certificate. The warranty becomes null and void if changes or repairs are made to the organ by persons or organizations that are not authorized by Johannus Orgelbouw b.v.

TROUBLESHOOTING

If you are experiencing problems with the organ, check here first. If your problem is not listed or the recommended solution does not correct the problem, please contact your Johannus dealer or Johannus-LDS Support.

Symptom: Some or all of the pedals don't work.
Solution: Make sure that the pedalboard is slid tightly against the organ console.

Symptom: Some stops are stuck on.
Solution: Make sure the general crescendo pedal is in the zero position (off). The crescendo pedal lights stops as they are activated and cannot be canceled manually or with the cancel piston.

Symptom: I cannot program a piston.
Solution: Make sure you are not trying to program pistons on memory level one or two. Both memory levels one and two are locked and cannot be changed. Please select a memory level between 3 and 100.

Symptom: My programmed piston does not recall all of the stops I selected.
Solution: Make sure you are using a general piston if you would like to store and recall stops on all divisions of the organ.

EXTERNAL CONNECTIONS

The external connections are located under the left side of the keyboards.
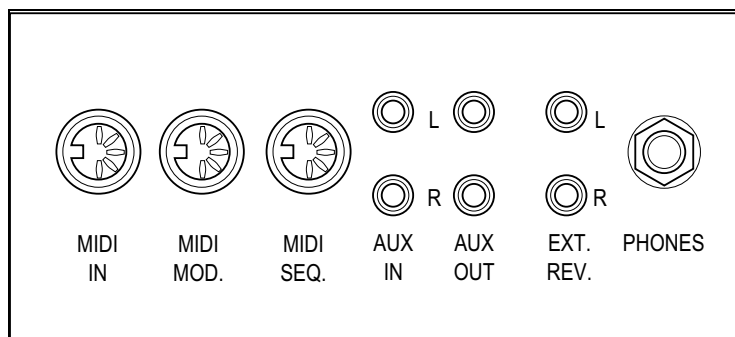
MIDI IN: This is an input for receiving MIDI codes from other devices.
MIDI MOD: This is a programmable MIDI output for connecting a module or expander.
MIDI SEQ: This is a non-programmable MIDI output for connecting a sequencer or PC (with the Johannus Intonat voicing software).
AUX IN: This is a stereo input for playing the sound of an external device through the amplifiers of the organ. For example, an expander that is connected to the organ through MIDI MOD can be played through the instrument's loudspeakers.

☞   The volume of the device that is connected through the AUX IN cannot be adjusted with the general volume or the expression pedals. However, this is possible if the volume setting of the external device is controlled by means of MIDI codes through the MIDI MOD. connection of the instrument.

AUX OUT: This is an output for connecting an external stereo amplifier or recording device.
EXT. REV.: This is an output for connecting Johannus external acoustics. This is a system that imitates the spatial effect of a concert hall or cathedral.

⚠   Do not use this output for other purposes.

PHONES: This connection for a stereo headphone is suited for a headphone with an impedance of 30Ω or higher (see headphone specifications).

☞   When the headphone is used, the internal and/or external loudspeakers of the organ are automatically switched off.

MIDI IMPLEMENTATION CHART

Functions		Transmitted	Recognized	Remarks
Basic Channel	Default	See MIDI Specs	See MIDI Specs	See MIDI Specs
	Changes	See MIDI Specs	Y	
Mode	Default	Mode 3	Mode 3	
	Messages	N	N	
	Altered	**********	N	
Note Number	True Voice	36-96		
		**********		
Velocity	Note ON	9nH=1-127	9nH=1-127	Velocity ON
		9nH (v=64)	9nH=1-127	Velocity OFF
	Note OFF	9nH (v=0)	9nH=0, 8nH	
			v=*	*=irrelevant
After Touch	Keys	N		
	Channels	N		
Pitch Bend		N		
Control Change	7	Y	Y	General Volume
	11	Y	Y	Expr. Pedals
	100/101/6	Y	Y	Pitch
	100/101/6	Y	Y	Transposer
Program Change	: True #	See MIDI Specs	See MIDI Specs	See MIDI Specs
	**********		See MIDI Specs	See MIDI Specs
System Exclusive		See MIDI Specs	See MIDI Specs	See MIDI Specs
Common	: Song Pos	N	N	
	: Song Sel	N	N	
	: Tune	N	N	
System Real Time	: Clock	N	N	
	: Commands	N	N	
Aux	: Reset All Contr.	N	N	
	: Local ON/OFF	N	N	
	: All Notes OFF	Y	Y	
	: Active Sense	N	N	
	: Reset	N	N	

Mode 1: OMNY ON, POLY   Mode 2: OMNY ON, MONO   Y = YES
Mode 3: ONMY OFF, POLY   Mode 4: OMNY OFF, MONO   N = NO

Default Basic Channels (transmitted/recognized)

    1:      Great Notes
    2:      Swell Notes
    3:      Pedal Notes
    12:    Stops

Basic Channel Changes (transmitted)

Can be programmed in the Programmable MIDI menu.

Control Changes (transmitted)

Controller 7 (07h)	General volume, with volume values 40 (28h) – 127 (7Fh).
Controller 11 (0Bh)	Expression pedals, with volume values 63 (3Fh) – 127 (7Fh).
Controller 6 (06h)	Pitch, with pitch values 33 (21h) – 95 (5Fh). Pitch value 64 (40h) = A = 440 Hz. The following applies to pitch: LSB 100(64h) 1(01h) MSB 101(65h) 0(00h)
	Transposer, with transposer values 61 (3Dh) – 67 (43h). Transposer value 64 (40h) = A = 440 Hz. The following applies to the transposer: LSB 100(64h) 2(01h) MSB 101(65h) 0(00h)

Control Changes (recognized)

Controller 7 (07h)	General volume, transposer 0 (00h) – 127 (7Fh).
Controller 11 (0Bh)	Expression pedals, transposer 0 (00Fh) – 127 (7Fh).

Program Changes (transmitted/recognized)

Organ stops: This depends on the number of stops and the sequence of stops.
MIDI stops (programmable): 1-128

System Exclusive Messages (transmitted/recognized)

Each 'sys ex' (system exclusive) message largely looks the same. The first 7 bytes and the last byte are always the same. Only the value of the 8th byte varies. This is the 'sys ex message' that Johannus generally uses: F0 00 4A 4F 48 41 53 XX F7 (hexadecimal).

Therefore, with the 'sys ex messages' described below, only the value of the 8th byte (XX) is given, and from which output it is transmitted.

All stops off
The 'all stops off' sys ex code is 7F. This sys ex code is transmitted through the MIDI SEQ. output when the 0 piston is pressed for a long time.

When an 'all stops off' sys ex code is received, all stops on the instrumentare switched off.

Thumb piston values
When a piston is pressed, a sys ex code is transmitted with the value of the piston that is pressed (for example PP = 00 P = 01) through the MIDI MOD. output.

These sys ex codes are only important when the Johannus sound module CSM 128 is connected to your instrument.

Other MIDI codes (transmitted)
Press the 0 piston to transmit the sys ex code, 'all stops off' and all volume settings through the MIDI SEQ. output.

Sys ex code stops (Program Changes)
When a MIDI stop is switched on and off, besides the usual Program Change, an extra Program Change code (preceded by the sys ex code 3F) is transmitted through the MIDI SEQ. output. This is to distinguish between a 'normal' organ stop and a MIDI stop before transmitting a module.

When a stop is switched on and off, the following codes are transmitted:

Organ stop: Through MIDI SEQ. :   CB XX
MIDI stop: Through MIDI MOD. :   CX XX
             Through MIDI SEQ. :   CB XX and 3F CX XX

WM-44 LDS SPECIFICATION

Great

Bourdon	16'
Open Diapason	8'
Stopped Flute	8'
Claribel Flute	8'
Gemshorn	8'
Gemshorn Celeste	8'
Octave	4'
Harmonic Flute	4'
Octave Quint	2 2/3'
Super Octave	2'
Full Mixture	IV
Cromorne	8'
Posaune	8'
Chimes	
Tremulant	
Swell to Great	

Swell

Gemshorn	16'
Diapason	8'
Gedeckt	8'
Flute Celeste	8'
Viola di Gamba	8'
Voix Celeste	8'
Principal	4'
Chimney Flute	4'
Aeoline Celeste II	4'
Nasard	2 2/3'
Piccolo	2'
Tierce	1 3/5'
Mixture	IV
Double Trumpet	16'
Trumpet	8'
Oboe	8'
English Horn	8'
Clarion	4'
Tuba	8'
Tremulant	

Pedal

Contra Violone	32'
Open Diapason	16'
Bourdon	16'
Echo Bourdon	16'
Octave	8'
Bass Flute	8'
Choral Bass	4'
Mixture	III
Contra Trombone	32'
Trombone	16'
Fagotto	16'
Trumpet	8'
Clarion	4'
Great to Pedal	
Swell to Pedal	
Chorus	
MIDI Great	
MIDI Swell	
MIDI Pedal	

Specification

45 LDS Classic Voices
45 French Symphonic Voices
45 German Baroque Voices
45 Historic Voices
Orchestral: Chimes, Harp, Piano
100-level full capture system
10 generals / 6 per division
1 Tutti
General crescendo pedal
ASR-12 Acoustic Reverberation*
3 programmable MIDI pistons
Melody coupler piston
Bass coupler piston
16-key transposer
Pitch control, +/- half step
General volume control*
SET, +/- and Cancel pistons
Menu piston

Technical Data

Audio 6.1 system:
7 amplifiers total 900 Watts
19 loudspeakers
7 speaker cabinets

Connections:
Headphone out
Stereo auxiliary in
Stereo auxiliary out
Stereo auxiliary out (XLR)
MIDI in, mod. (out), seq. (out)

Graphical display:
2 expression level indicators
General crescendo level
Pitch & transposer status
162-hymn player system
Prelude Player

AGO Console

3 custom finishes:
- Dark Oak, LDS-95
- Medium Oak, LDS-110
- Cherry on Oak
Solid wooden console
32-note AGO pedalboard
2 x 61-note keyboards

Music rack with page holders

Adjustable bench

Intonat 5.128 Voicing Software

* control accessible only to installer